

 
 
McCoy

A Promise of Happiness

USE & CARE MANUAL
CUM WARRANTY CARD


Gas Stove

the art of creative
cooking.

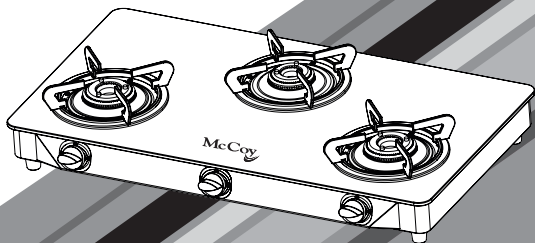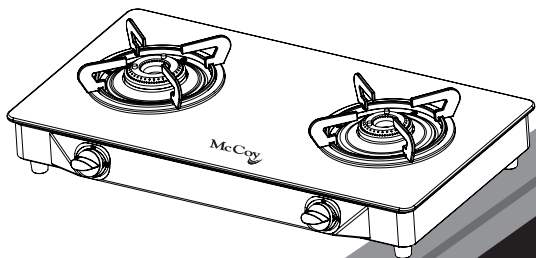

Applicable Models:
Agni 2B Plus/3B Plus,
Urjaa 2B Plus/3B Plus,
Josh Duo & Blaze Duo

 Product Description

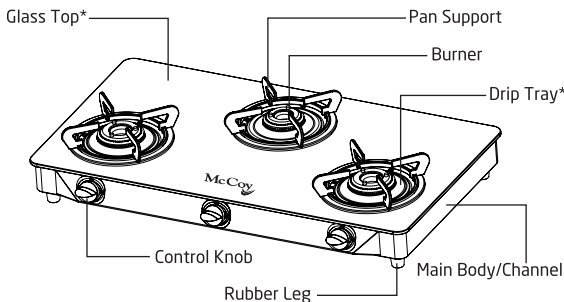

Technical Specification:


Model	Agni 3B Plus		Urjaa 3B Plus		Agni 2B Plus		Urjaa 2B Plus		Josh Duo		Blaze Duo	
Type	3 Burner		3 Burner		2 Burner		2 Burner		2 Burner		2 Burner	
Burner Rating	g/hr	Kcal/hr	g/hr	Kcal/hr	g/hr	Kcal/hr	g/hr	Kcal/hr	g/hr	Kcal/hr	g/hr	Kcal/hr
Small	1x143	1x1559	1x143	1x1559	1x143	1x1559	1x143	1x1559	1x143	1x1559	1x143	1x1559
Big	2x189	2x2060	2x189	2x2060	1x189	1x2060	1x189	1x2060	1x189	1x2060	1x189	1x2060
Total Gas Input	521	5679	521	5679	332	3619	332	3619	332	3619	332	3619
Body Finish	Stainless Steel		Powder Coated		Stainless Steel		Powder Coated		Stainless Steel		Stainless Steel	
Gas	For Use with LPG at 2.942kN/m ² (30gf/cm ²)											
Ignition System	Manual		Manual		Manual		Manual		Manual		Manual	

Note: The image shown above is for representation only & may vary from model to model

How to assemble your Gas Stove

While unpacking, make sure that all parts of gas stove are included

 - Push the rubber tube is attached to the gas regulator (cylinder) on to the nozzle till the end. The tube should not be twisted, looped or kinked, or subjected to external pressure of any kind.
- Not more than 1.5 meters (4.5ft) length of tube should be used to connect the gas stove. The tube not be extended from one room to another and must not be passed through doors, windows, walls, partition, ceilings or floors.
- After the tube is fixed, the gas stove is ready for use.



How to use Gas Stove



To light your gas stove:

First open the regulator, press the gas control knob and then turn the knob towards the ON position.

Use a gas lighter or alighted match stick to light the gas stove

Note:

1. The stove may not light at first click, if used after a long gas of time. This is because the gas takes a little time to flow through the pilot tube and ignite the flame.
2. To ensure faster ignition, press the knob, hold for a second and then turn the knob to ON position.
3. Always make sure that the gas is lit when the knob is turned to ON/SIM position. Otherwise the gas will be leaking.
4. If the stove does not light, bring the knob to OFF position and repeat until the gas lights.

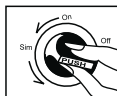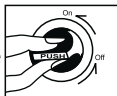

To simmer the flame:

- Turn the gas control knob to SIM position by turning counter clockwise to reduce or SIM the flame.
- You can cook on different size burners depending on your needs. The smaller burner helps you cook food that usually stove doesn't take long. The larger burner be used for normal cooking, steaming and deep frying. In the 3/4 burners models there is one extra larger burner which helps you in faster cooking.

To turn the gas Stove off:

Turn "OFF" the gas regulator. Then, turn the gas control knob the "OFF" position.

Hints:

- When using high flame, ensure that you use large sized vessels to cover the entire flame to avoid wastage of gas.
- When using smaller vessels, reduce the flame intensity to the required optimum.
- After desired temperature is attained while cooking, it is sufficient to keep the flame intensity at a reduced level to maintain the temperature.
- In case, you have any difficulty in assembling the gas stove, please call the nearest Service Center.

Things you should be careful about

- Use the gas stove for cooking only. Do not use dry towels, Cloth etc. over it.
- Always use liquefied petroleum gas (L.P.G.) that comes in a cylinder that can be attached to the gas stove.
- To connect the gas stove to the cylinder, use standard good quality tubing only. Do not use vinyl plastic tube, as thin can be dangerous.
- Make sure that the rubber tube does not touch any part of the gas stove or lie underneath it because it is susceptible to burst.
- Always check the rubber tube for any wear and tear to avoid gas leak and prevent danger.
- Avoid keeping inflammable near the gas stove.
- When in use, do not touch the pan supports of the gas stove to avoid burns.
- Never apply excessive pressure to the gas control knobs. Do not tamper the knob.
- Clean the burner regularly so that they don't get clogged. Do not use abrasive materials for cleaning.
- After cooking is over, turn both the gas controls knobs and the regulator in 'off' position.
- If you smell gas leaking, Close the gas regulator of the cylinder and then open up all windows and call your gas supply agents immediately. Do not switch on an electric light or light matches/lighters etc.
- The cylinder should not be tilt horizontally when in use. Use always in vertical position.
- Make sure the gas stove should be away from children so that there should not be any chance of burnt by flame.
- Keep the gas stove out of reach from children.
- Ensure that no appliances working on electricity or any other fuel are installed within a distance of 1 meter from the LPG installation (Gas stove, Tubing, Regulator and Cylinder).
- Do not drop any heavy objects on the glass surface as it may scratch/shatter the glass top* (Selected Models).
- The gas tube must be checked regularly for wear or leaks. It must be replaced every years. If it damaged or leaked then the gas tube should be replaced immediately.
- Keep the burners clean at all times to make sure gas consumption is optimum. To clean the burner holes use a brush wire, If you clean the burners with water then make sure it should be dry properly after clean.
- Wipe the glass top and body with a dry cloth. If it is cleaned by soapy water dry thoroughly with dry cloth. Do not use hard scrubbers, or any abrasive material as it may scratch the glass top and body
- Wash the pan support in water and dry it throughly before replace

Warranty

This warranty is valid for a period of two years from the date of original purchase, subject to the following terms and conditions.

- 1) The L.P. Gas Stove is only to be serviced by the Company or by its Authorised Agent.
- 2) The service/Repair will be provided at the company's Service/Authorized Service Center.
- 3) The customer shall bear all the conveyance expense and other incidental expenses towards Service/Repair.
- 4) The customer shall carry the L.P. Gas Stove to the nearest Company service/Replacement under this Warranty at the earliest, but shall not be liable to do so within any specified time.
- 5) The warranty limited to the Repair/Replacement of parts of the L.P. Gas Stove.
- 6) The warranty will continue and remain in force only for the unexpired period of the original Warranty, in regard to the Repair/Replacement of parts of the L.P. Gas Stove.

The L.P. Gas Stove shall be used strictly for domestic cooking/heating purpose in accordance with the instruction manual. The Company shall not be held liable for any accident, loss or damage (direct or indirect) to person or property cause by reason:

The warranty is not valid if:

- a) Repairs/Service attended by unauthorized service person.
- b) Misuse/abuse or negligence on the part of the person.
- c) Defective leakage in the cylinder valves or tubing
- d) Misuse or negligence in the use of cooking utensils.
- e) Defects caused by improper/reckless use.
- f) Use of spurious spares/old, non-genuine spares.
- g) Cylinders, valve, pressure regulator or tubing not conforming to the relevant specification.
- h) Failure to comply with any safety precaution or maintenance tip suggested by the Company, as well as the supplier of LPG/manufacturer of the pressure cooker or any other utensil or appliance used on the L.P. Gas Stove.
- i) Original serial number is deleted/defaced or altered.

- 8) The card is to be completed and signed by the dealer immediately on purchase.
- 9) The company shall not be responsible for any special consequential damages or loss arising for any delay in the performance of this warranty due to cause beyond their control.
- 10) Replacement of spares such as knobs, gas jets and gas cock assembly are not covered warranty, as these parts require periodic renewal.
- 11) The decision of the company is final in all cases of complaints.
- 12) The Company reserves the right to retain any part or component at the Service Station/branches or Authorized Service Agent or at its workshop and shall effect Repairs/Replacement or parts or component as its sole discretion.
- 13) This warranty shall not in any case extend towards payment or any monetary consideration whatsoever.

This warranty card if not completed, signed and stamped by the dealer from whom the appliance is purchased will be treated as invalid.

Force majeure : The company cannot be held liable in any manner for non availability of services of the said product on account of strikes, lock-outs, major labour problems, non-availability of essential raw materials, government regulations, civil commotion, riots and acts of God.

Jurisdiction : For all the disputes/differences arising out of these presents, the courts of Mumbai alone shall have jurisdiction.



Paste QR Code Here

Bill No. _____ Date _____

Name of the Purchaser _____

Address _____

Phone No. _____

Name & Address of the Dealer with Stamp

Signature of Dealer

Customer Care: 022 28530234/35/36/37

Email: customercare@mccoyindia.in

Whatsapp Helpline: 8291270276

 **Toll Free No.: 1800 22 0276**

This warranty is not valid if above information is not duly filled in.



Marketed by:

CANBARA INDUSTRIES PVT. LTD.

SSAS Complex, Lekhraj Devraj Industrial Estate,
Kherani Road, Sakinaka, Andheri (E), Mumbai - 400 072, INDIA

Join us @McCoy Appliances



www.mccoyindia.in

Disclaimer: Due to continuous development the features & Specification may change without prior notice.